2. Overview of the Washing Machine

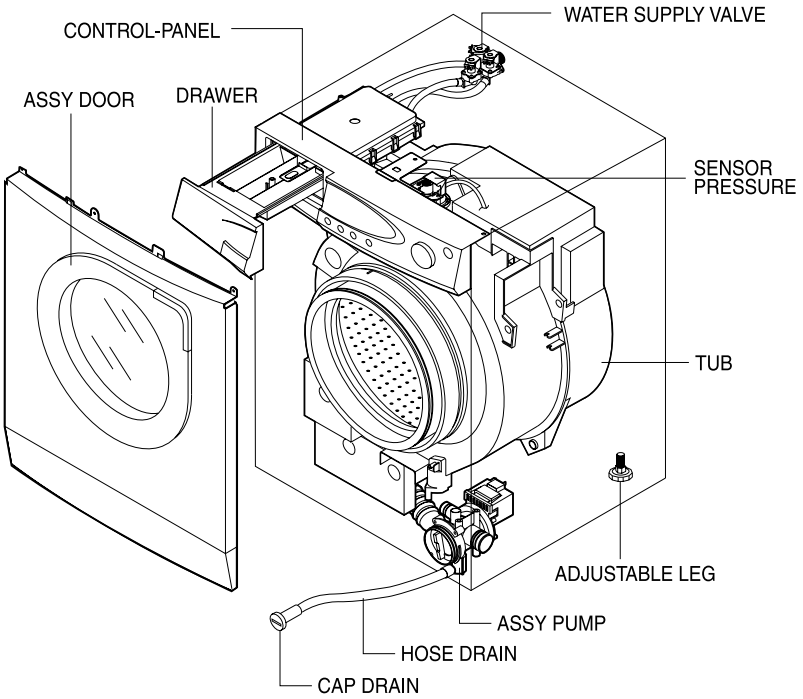

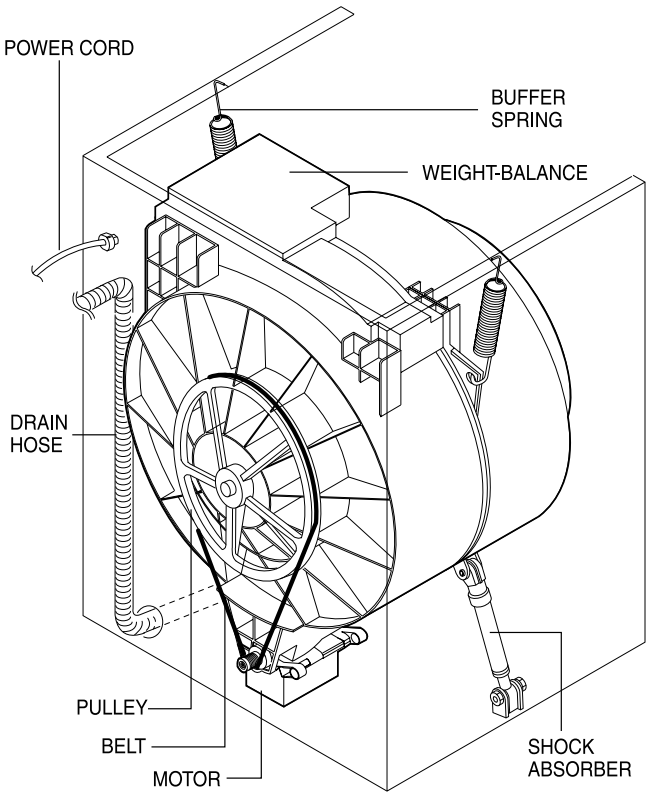

3. Overview of the control panel

P1405J/1205J

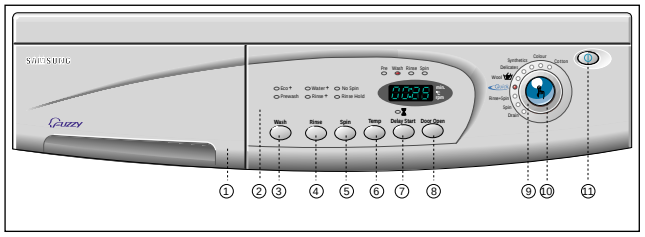

P1005J

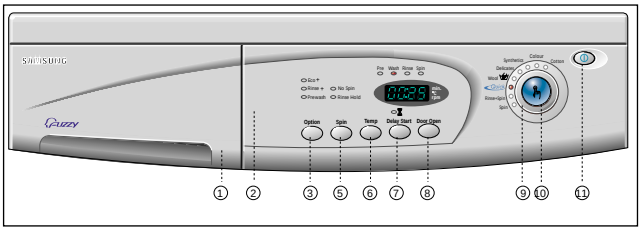

P805J

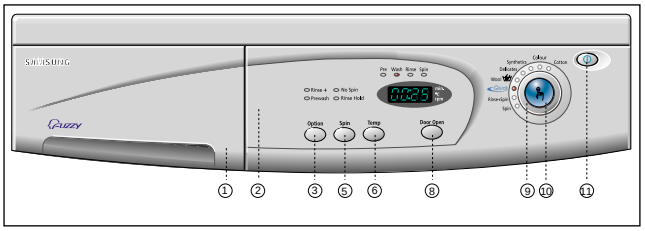

1. Detergent dispenser

2. Display panel

Displays the remaining wash cycle time and error messages.

3. Wash Option

Press the button repeatedly to cycle through the available partial wash options

P1405J/P1205J : Eco⁺ ➔ Prewash ➔Cance➔Eco⁺).

P1005J :

Eco⁺➔Rinse⁺➔Prewash➔(Eco⁺+Rinse⁺) ➔(Rinse⁺+Prewash)➔Cancel➔Eco⁺

P805J : Rinse⁺➔Prewash➔(Rinse⁺+Prewash)➔Cancel➔Rinse⁺

Note : Prewash/Eco+ is available only with Cotton, Colour, Synthetic or Delicate programs.

4. Rinse Option Button

Press the button repeatedly to cycle through the available partial rinse options (Water⁺ ➔ Rinse⁺ ➔(Water⁺+Rinse⁺) ➔Cancel ➔Water⁺).

5. Spin selection button

Press the button repeatedly to cycle through the available spin speed options.

P1405J	no, rh, 400, 600, 800, 1000, 1200, 1400 rpm
P1205J	no, rh, 400, 600, 800, 1000, 1200 rpm
P1005J	no, rh, 400, 600, 800, 1000 rpm
P805J	no, rh, 400, 600, 800 rpm

no:no spin,
rh:rinse hold

When pressing this button during operation, you can see the selected spin speed in the display panel.

6. Temperature selection button

Press the button repeatedly to cycle through the available water temperature options (cold water, 30 ˚C, 40 ˚C , 60 ˚C and 95 ˚C).

When pressing this button during washing, you can see the selected temperature in the display panel.

7. Delay Start button

Press the button repeatedly to cycle through the available delayed start options (from 1 hour to 24 hours in one hour increments).

8. Door Open button

Press to open the washing machine door.

Note: You cannot open the door until you press ⏻(On/Off).

9. Fuzzy Control dial

Turn the dial to select one of the nine available wash programs.

P1405J/P1205J	: Cotton, Colour, Synthetic, Delicate, Wool, Quick, Rinse+Spin, Spin, Drain
P1005J/P805J	: Cotton, Colour, Synthetic, Delicate, Wool, Quick, Rinse+Spin, Spin

10. Start/Pause button

Press to pause and restart programs.

11. ⏻ (On/Off) button

Press once to turn the washing machine on, press again to turn the washing machine off. If the washing machine power is left on for longer than 10 minutes without any buttons being touched, the power automatically turns off.

7. Designation of Main Components

7-1 Normal / Reverse Revolution of Motor and R. P. M. Control

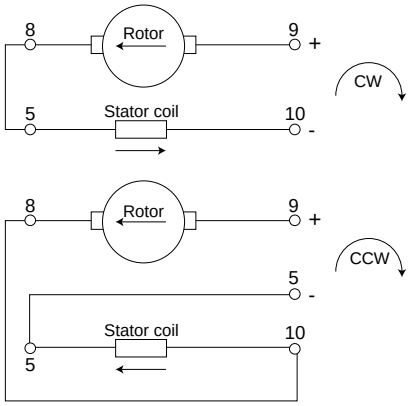

<Figure1>

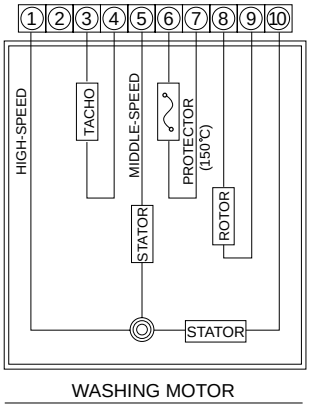

<Figure2>

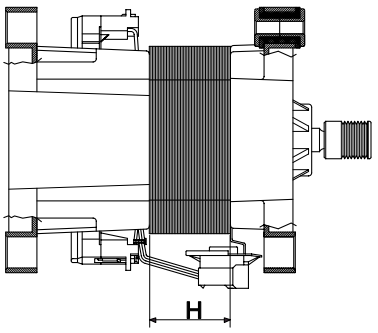

<Figure3>

(± 7%)	STATOR(5.10)	STATOR(5.1)	ROTOR(8.9)	TACHO(3.4)	PROTECTOR(6.7)	"H"(mm)	Code-No	Remark
Resistance value	2.07 Ω	0.90 Ω	2.35 Ω ↑	42.7 Ω	0	45	DC31-00002C	B
Rated value	220~240V / 50Hz							

7-2 Door safety Device

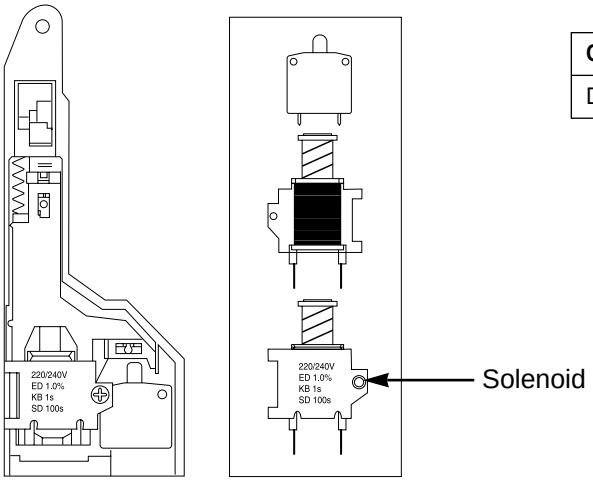

Code No.	Solenoid Coil Resistance
DC61-00115A	210Ω±10%

7-3 Heater

1) Capacity : AC 230V/2000W
2) Location : Bottom of TUB
3) Function : Raise the water temperature supplied at the wash process.
4) Resistance value : 23Ω ~ 29Ω
5) Thermal Fuse : 128°C

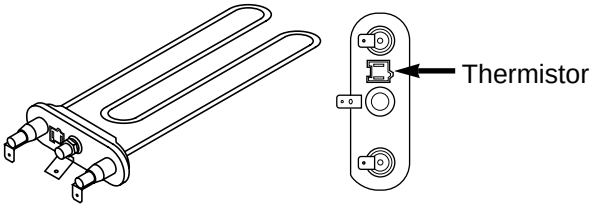

7-4 ASSY-TUB BACK

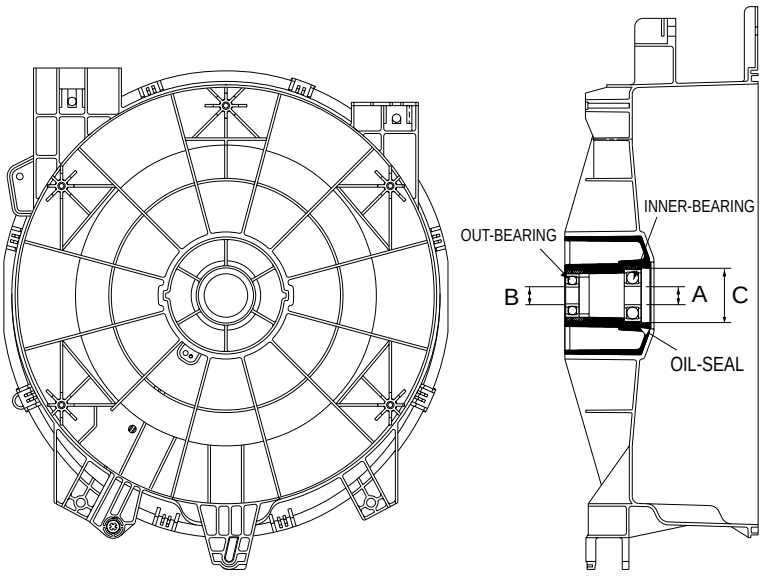

(unit : mm)

TYPE	INNER-BEARING(A)	OUT-BEARING(B)	OIL-SEAL(C)	Assy-Housing Bearing(D)	Assy-Tub Back	REMARK
I	ø 30	ø 25	ø 43.9	DC97-00419A	DC97-00214A	P1405J
II	ø 30	ø 25	ø 43.9	DC97-00125A	DC97-00214B	P1005J/P1205J
III	ø 20	ø 17	ø 24.3	DC97-00215D	DC97-00214K	P805J

7-5 ASSY- DRUM

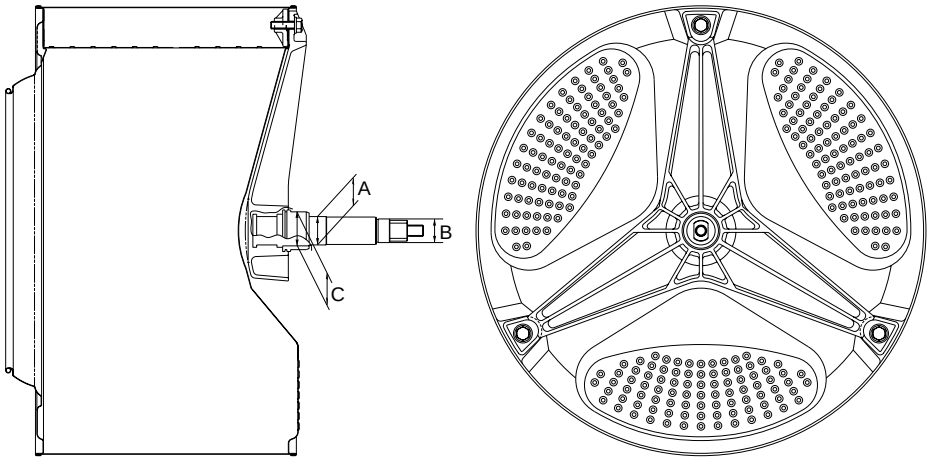

(unit : mm)

TYPE	(A)	(B)	(C)	CODE-NO.	REMARK
I	ø 30	ø 25	ø 44.7	DC97-01463A	Lifter type P1005J/P1205J/P1405J
II	ø 30	ø 25	ø 44.7	DC91-12281A	P1205J/P1005J
III	ø 30	ø 25	ø 44.7	DC97-00785B	P1405J
IV	ø 20	ø 17	ø 25	DC97-00785A	P805J